

EMERGENCY SWITCHER



FEATURES


- **AUTO FIRE SENSOR**
The fire sensor connector is provided connect easily to the terminal and connector.
- **SPEAKER SWITCHING ON EMERGENCY**
You can control the speaker relay on the emergency operating mode by using the provided speaker switch.
- **FIRE AND SPEAKER SWITCHING INDICATOR**
You can discern the floor easily where take fire and confirm the speaker relay control by watching the indicators.
- **EXTENSION FUNCTION**
You can connect easily to the next model (ES-9116 model by our company) by the connector when extend over sixteen layer.
- **UNDERGROUND BROADCASTING**
This is designed to compose easily the linkage layer among each layer of fire-alarm form the first layer to sixth layer.

* This model should be used with concerning equipment (matrix-our model PX-9116, relay group-our model RG-9116, emergency panel-our model EP-9216)


SPECIFICATIONS

- **ELECTRICAL** *0dB=0.775Vrms
 - Fire Sensor16 Line
 - EM Speaker Relay Control16 Line
 - Indicator.....Fire & EM 16
All Mode 1
- **GENERAL**
 - Power SourceDC 24V
 - Weight3.2kg
 - Dimensions482(W) ×44(H) ×280(D)mm

ES-9116

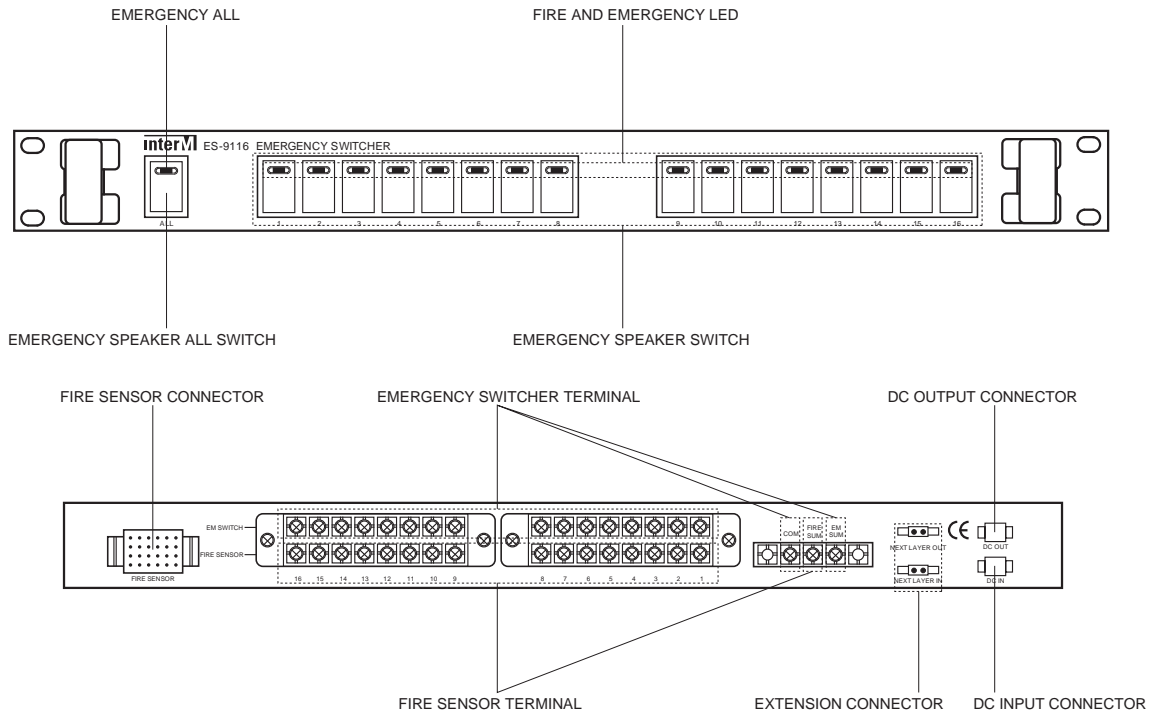

BLOCK DIAGRAM

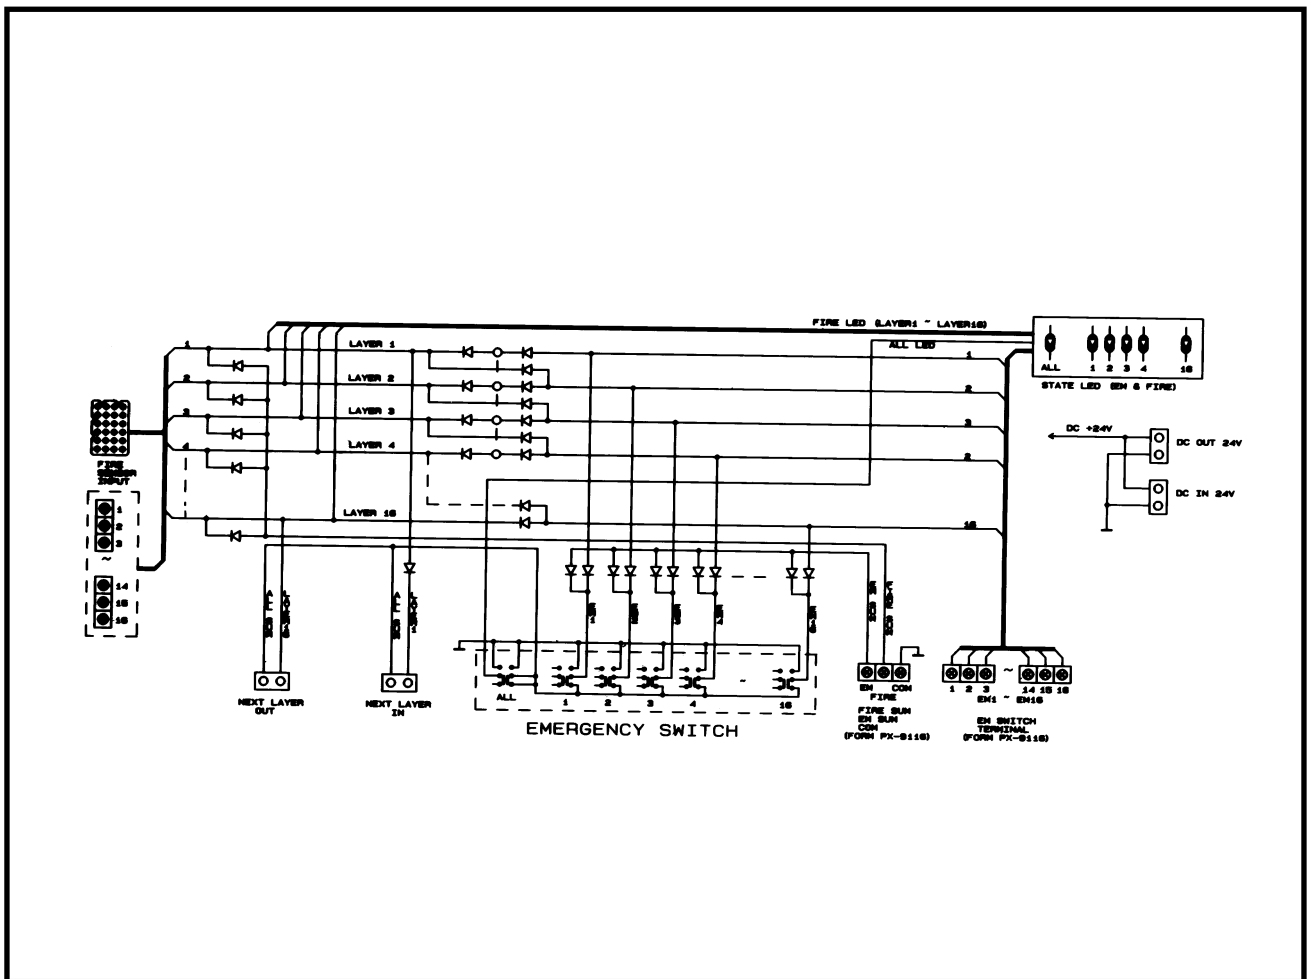

interM

OFFICE : 653-5 BANGHAK-DONG, DOBONG-KU, SEOUL, KOREA TEL : 82-2-2289-8140~8, FAX : 82-2-2289-8149
 Home page : <http://www.inter-m.com> E-mail : export@inter-m.com

9047912410 A